



SmX Cinema Solutions, Corp
USA Headquarters

1520 SW 5th Court Pompano Beach, Florida 33069-3523
Phone: (888) 810-6906 - Local: (954) 780-9757 - Fax: (866) 310-1580
email: support@smxscreen.com
www.smxscreen.com

PROPANELS Assembly and Installation Instructions

For 1.78:1 ProLine Fixed Screens


Rev. February 2010

INSTALLING THE PROPANELS FOR 1.78:1 (16:9) FIXED SCREENS

If you ordered the ProPanel masking panels with your fixed screen, the two ProPanel plastic tracks will need to be installed in the bottom frame portion prior to assembly of the frame if they are not already pre-installed (See Red track in break away diagram below).

ASSEMBLING FRAME

When you are assembling your screen frame, you will find that two of the eight corner brackets are smaller in size. The two smaller corner brackets measure 6.5" x 2", insert the two inch side of these two shorter brackets in the same channel that the two ProPanel tracks are installed in (see diagram below).

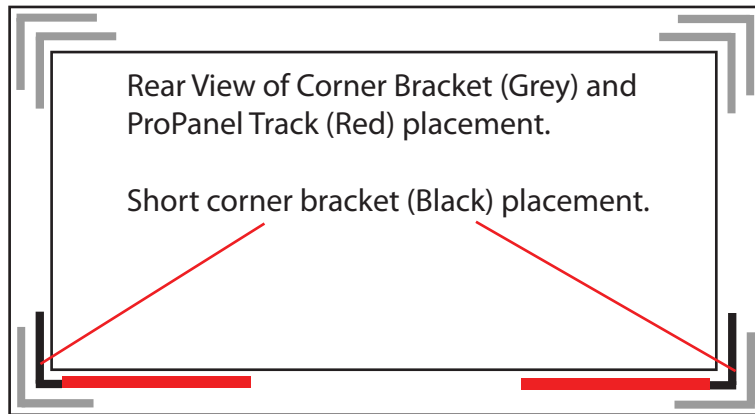

INSTALLING SCREEN SURFACE

Since the ProPanels get inserted in between the frame face and the screen surface, your screen surface will need to be installed in the second channel that is closest to the outside of the frame (see arrows).

INSTALLING PROPANELS

The ProPanels for 1.78:1 fixed screens come in four pieces (unless otherwise requested). The two top ProPanels contain metal clips on the face. Be sure that metal clip is facing away from the screen surface and slide each top ProPanel up in-between the screen surface and the frame and the clip will catch in the corner bracket groove (see green clip in diagram to right). Each ProPanel side has an offset to overlap with each other so there is no gap between the two panels.

The two bottom ProPanels do not have clips and slide down in-between the screen surface and the frame and fall into a channel in the bottom (red in diagram to right).

Install screen surface
in this channel

