



SmX Cinema Solutions, Corp
USA Headquarters

1520 SW 5th Court Pompano Beach, Florida 33069-3523
Phone: (888) 810-6906 - Local: (954) 780-9757 - Fax: (866) 310-1580
email: support@smxscreen.com
www.smxscreen.com


PROPANELS
Assembly and Installation
Instructions
For ProLine and ProCurv screens
Rev. May 2009

INSTALLING THE PROPANELS

If you ordered the ProPanel masking panels with your fixed screen, the two ProPanel plastic tracks will need to be installed in the bottom frame portion prior to assembly of the frame if they are not already pre-installed (See Red track in break away diagram below).

ASSEMBLING FRAME

When you are assembling your screen frame, you may find that two of the eight corner brackets are smaller in size. Insert the short side of these two shorter brackets in the same channel that the two ProPanel tracks are installed in (see diagram below).

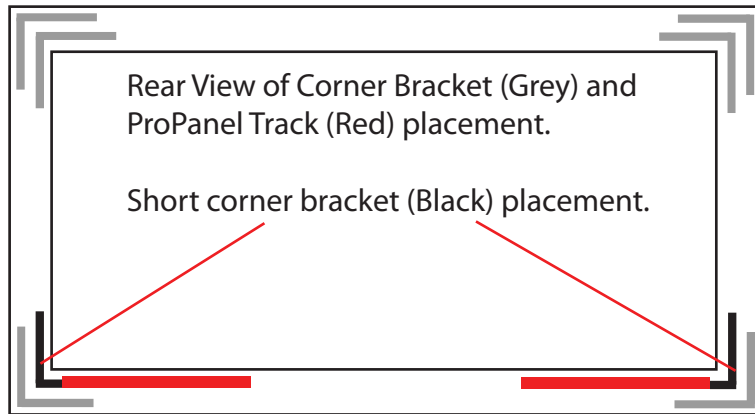

INSTALLING SCREEN SURFACE

Since the ProPanels get inserted in between the frame face and the screen surface, your screen surface will need to be installed in the second channel that is closest to the outside of the frame (see arrows).

INSTALLING THE PRO-PANELS

First insert the top of the ProPanel inside the top of the assembled screen in-between the frame face and the screen surface. Then drop the bottom of the ProPanel down into the bottom of the screen in-between the frame face and the screen surface. Slide to the edge and repeat steps for the other ProPanel.

Install screen surface
in this channel
(Black Backing Channel)

SCREEN SURFACE (BLUE LINE)

PROPANEL

Install screen surface
in this channel
(Black Backing Channel)

